YAMAHA

Music keyboard YK-01/YK-10 PARTS LIST


OCONTENTS

YK-10 Parts list ······	1
YK-01 Parts list ·····	3
YK-01, YK-10 Overall Circuit	
Diagram	4
Califa Wining Table	

008044




Scanned by abuur, converted to pdf by HansO, 2009

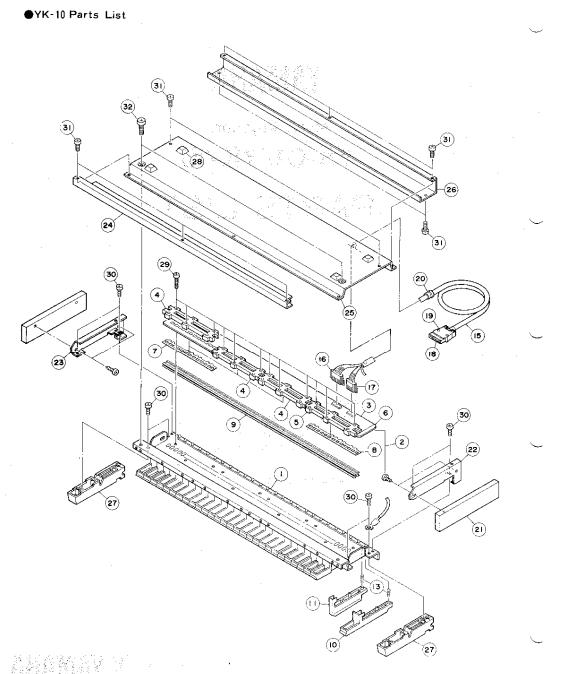

	Re			Description	品 名	Remarks
\sim	No	•				nemarks
	* 1	NB 83 02 60	Keyboard Assembly	49keys	鍵 盤 Ass'y	
	* 2	NB 83 02 50	Switch Unit		スイッチユニット	
	₩ 3	NA 81 35 80	Circuit Board, MK		м к > — 1	
	4	CB 03 24 00	P,C,B Holder Q	12keys	基板ホルダー Q	
	5	CB 03 24 10	P,C,B Holder K	13keys	" К	
	6	CB 03 35 40	End Plate		エンドプレート	
	7	CB 03 35 70	Isolation Spacer	12keys	絶縁スペーサQ	
	8	CB 03 35 80	n	13keys	и K	
	9	CB 03 23 20	Rubber Contact		可動導伝ゴム	
	10	CB 03 22 10	White Key	C,F	白 鏡	
		CB 03 22 20	и	D	- n	
		CB 03 22 30	"	B,E	n	
		CB 03 22 40	"	. G	n	
		CB 03 22 50	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	A	n	·
		CB 03 22 60	. #	C'	п	
	- 1.			0	黒鍵	
\sim	11		Diack Ney		防魔ピース	
	* 12		0 110 1			
	13				コイルスプリング	
	14				コードブッシュ	
	* 15	_			ケーブル(コネクター付)	(with Connector)
	16			8P	ハウジングコネクター	
		BB 00 44 30			ピンコンタクト	
	17			7P .	ハウジングコネクター	
	₩ 18			HIF3-20D	Я	
	#	LX 55 02 90		HIF3-2630 SCFC	ピンコンタクト	
	₩ 19	LX 55 03 00	Connector Cover	HIF3-20CV	ハウジングコネクタカバー	
	* 20	CB 81 12 30	Cord Stopper	SR-6N-4	コードストッパー	
	₩ 21	DX 55 00 10	Side Board	Left	側 板 (左)	
	1	DX 55 00 20	и	Right	(右)	
	* 22	AA 83 14 10	Angle	Left	金 具 (左)	
	* 23	AA 83 14 20	"	Right	〃 (右)	
	※ 24	AA 83 14 30	Front Angle		フロントアングル	***
	* 25	AA 83 14 40	Bottom Cover		ボトムカバー	
	₩ 2€				パネル	
3	₩ 27				拍 子 木	,
	₩ 28				ゴ ム 脚	
	29		Ever Tight Bind Screw	3×14	エバータイトバインドネジ	
	30		Bind Head Tapping Screw	4×10	バインドタッピンネジ	Black
	31		Bind Head Screw	4×8	バインド小木ジ	"
	-		#	5×12	"	n n
	32	+	<u>"</u>	3/12	銘 板	"
	33	. , co oo oo oo	THORE I IUIU		#SI 79X	
	·	:				
	-					
	<u> </u>					
	<u> </u>					
		-			<u> </u>	
					<u> </u>	
\sim						
_				ĺ		
	*	: New Parts				
			•			
				•		


●YK-01 Parts List

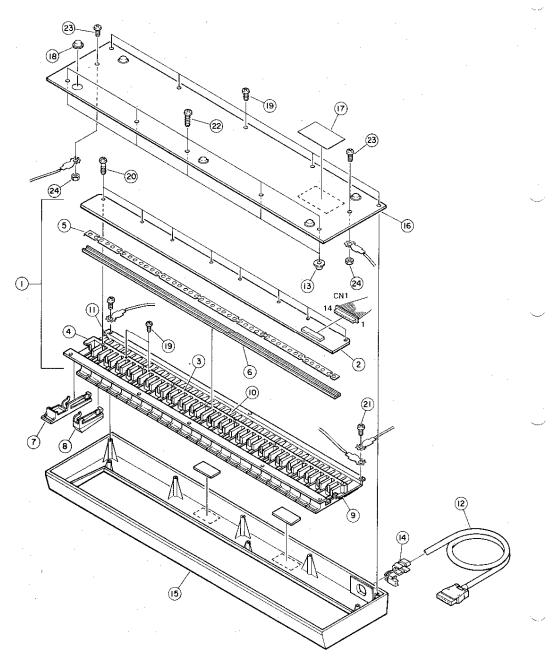


	Ref. No.	Part No.		Description	品		名	Remarks
* [1	NB 11 39 70	Keyboard Assembly	44 keys	鍵	盤	Ass'y	
-[2	NA 11 36 90	Circuit Board, MK	14.70	. M K	シ	- F	
	3	CB 04 04 70	Guide	F12 keys	+ -	Ħ	1 F	
	. 4	CB 04 04 80	n ·	F8 keys		н		1
* [CB 04 11 20	н	LF12keys	-14	n		
Į	5	CB 04 15 80	Isolation Spacer		絶縁	スペ	- #	
	6	CB 04 27 00	Rubber Contact		可動	導 伝	J 4	
	7	CB 04 03 70	White Key	F	Ė		鍵	
L		CB 04 03 80	n	G	1.	н		
		CB 04 03 90	n	Α	*	"		
L		CB 04 04 00	, n	В		n	٠.	
L		CB 04 04 10	н	c		#		1
		CB 04 04 20	,,	D		н		
L		CB 04 04 30	, n	E		n		
L		CB 04 04 40	. "	F', C,		п		
L	8	CB 04 04 50	Black Key		黒		鍵	
I.	9	CC 01 54 90	Felt, Keyboard Flam	t1×5×516.5	鍵盤	フェ	ルト	- '
	10	AA 05 30 70	Spring	F12	+ - z	プリ	ング	
	11	AA 05 30 80	ıı .	F8		n		
L	12	Mi 01 48 90	Cable	T	コネクタ	-付ケ	ーブル	(with Connector)
	13	CB 05 28 30	Spacer		スペ		サ	·
1	14	CB 05 43 00	Cord Bush		1 -	F 1	押え	
L	15	NK 00 93 50	Upper Case		上ヶ		z	
L	16	AA 10 07 20	Bottom Case Ass'y		底	***	板	
L	17	CB 05 75 60	Name Plate		銘		板	
L	18	CB 03 71 20	Leg			脚		
L	19	Ei 03 01 40	Bind Tapping Screw	3×14	バインド	タッピ	ンネジ	
L	20_	Ei 03 01 80	п	3×18		n.		
L	21:	Ei 33 00 80	. <i>n</i>	3×8		n.		*
Į.	22	Ei 33 01 60	н	3×16		u		
L	23	ED 33 00 60	Bind Screw	3×6	バイン	下小	ネ ジ	
L	24	EV 10 33 00	Nut	38	六 角	+ •	νŀ	
L								
L				·				
L		·						
ŀ				<u> </u>			-	
L					<u> </u>			
F								<u> </u>
H				<u> </u>				
┞			<u></u>	<u> </u>				
H				<u> </u>	<u> </u>			
F				 				
l								
1			<u></u> _		<u> </u>			·
ŀ								
H				<u> </u>				
H								· · · · · · · · · · · · · · · · · · ·
H	+		······································	 				
H	-		*****	 	+			1
-				 				
_	as - 10	ew Parts		1				
	≈ · (N	ew (dirg						
				•				4
			•					

Overall Circuit Diagram

YK-01 (44Keys)

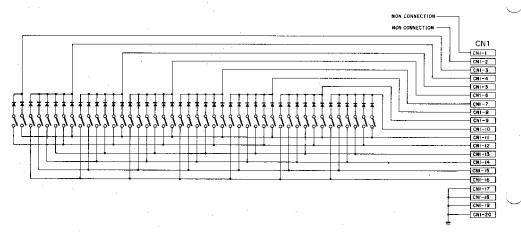

YK-10 (49Keys)

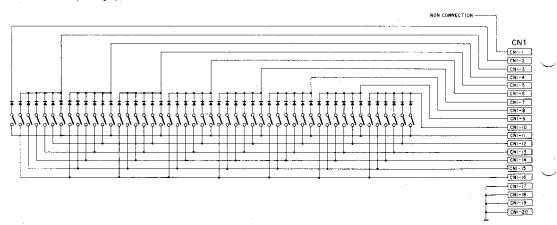

●ケーブル実体配線図(Cable Wiring Table)

YK-10	YK-01	Cable Pin No.		YK-01	YK-10
C1-1	NON CONNECTION	2	1	NON CONNECTION	NON CONNECTION
C2-2	C1-2	4	3	C1-1	C2-1
C2-4	C1-4	6	5	C1-3	C2-3
C2-6	C1-6	8	.7	C1-5	C2-5
C2-8	C1-8	10	9	C1-7	C2-7
C1-6	C1-10	12	11	C1-9	C1-7
C1-4	C1-12	14	13	C1-11	C1-5
C1-2	C1-14	16	15	C1-13	C1-3
E:	Ε	18	17	E	E
E	Ε	20	19	E	£

